

# DRIVE DEVELOPMENT KIT

## QUICK START GUIDE

### STEP 1

#### WHAT'S IN THE BOX

- 1 Drive Development Kit
- 2 Assorted Integrated Servo Drive connector cables
- 3 USB Cable

### STEP 2

#### CONNECT TO PC

- Connect to PC using the USB cable



### STEP 3

#### CONNECT TO DRIVE

- Select appropriate connector cable for your Integrated Servo Drive
- Connect cable to drive
- Connect cable to Drive Development Kit



### STEP 4

#### POWER DRIVE DEVELOPMENT KIT

- Connect Drive Development Kit to an appropriate power supply unit



#### Nominal Input Voltages

Drive	Input Voltage (Nominal DC)
Titan	12V
Leto	24V
Miranda	24V
Atlas	48V
Artemis	48V
Helios	48V

### STEP 5

#### REQUEST SOFTWARE

- Email your DDK serial number to [marketing@overview.co.uk](mailto:marketing@overview.co.uk) to receive your Servotorq Accelerator software

