

DRIVE DEVELOPMENT KIT

QUICK START GUIDE

STEP 1

WHAT'S IN THE BOX

- 1 Drive Development Kit
- 2 Assorted Integrated Servo Drive connector cables
- 3 USB Cable

STEP 2

CONNECT TO PC

- Connect to PC using the USB cable



STEP 3

Datasheet: ODD-00487 | Issue: 02 | March

CONNECT TO DRIVE

- Select appropriate connector cable for your Integrated Servo Drive
- Connect cable to drive
- Connect cable to Drive Development Kit



STEP 4

POWER DRIVE DEVELOPMENT KIT


- Connect Drive Development Kit to an appropriate power supply unit



STEP 5

REQUEST SOFTWARE

- Visit the Overview Download Hub <https://hub.overview.co.uk/> to request access to your Servotorq Accelerator software

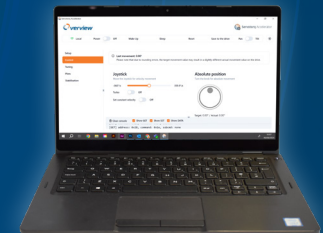

Nominal Input Voltages

Drive	Input Voltage (Nominal DC)
Titan	12V
Leto	24V
Miranda	24V
Atlas	48V
Artemis	48V
Helios	48V